

# RT03 - Hand Held Remote Control

## Operating manual

 Please read this manual carefully before use.

### Index

General .....	1
On/Off .....	2
Fan Speeds .....	3
Modes .....	4
Temperature Set-Points .....	5
Real Time Clock and Day .....	6
Timer .....	7
Batteries Replacement .....	8

### 1. General

This is an Infra red Remote Control Unit, which means it must be pointed at the thermostat (or extra receiver) to operate.




Every time you change a parameter in the Remote Control, you must send it to the thermostat by pressing the "ON/SEND".

### 2. On/Off

- Press the ON/SEND button to activate the air conditioner / fan coil unit and/or updating information.







### 3. Fan Speeds

- Press the FAN button to switch between fan speeds:
  - High Speed 
  - Medium Speed 
  - Low Speed 
  - Auto Speed **A**
- Press the ON/SEND button to send information to thermostat.



## 4. Modes

- Press the MODE button to switch between:

 
- Cool 
- Heat 
- Auto change-over 
- Fan only 



- Press the ON/SEND button to send information to thermostat.

## 5. Temperature Set-Point

- Adjust the desired temperature using the (+) or (-) buttons.



- Press ON/SEND button to send information to thermostat.



## 6. Real Time Clock and Day

- Press the SELECT button - CLOCK SET will flash.



 
- Press the (+) or (-) buttons - the hours will flash.



- Adjust the hours using the (+) or (-) buttons.



- Press the SELECT again - minutes will flash.



- Adjust the minutes using the (+) or (-) buttons.



- Press the SELECT again to return to normal display mode.



- Press the ON/SEND button to send information to the thermostat.



## 7. Timer



**IMPORTANT:** If no button is pressed for 10 seconds the display will return to normal display mode.

### Start Time:

- Press the SELECT button twice - PROGRAM & START (flashing) will appear on display.



- Press the SELECT button - the hours will flash.



- Adjust the hours using the (+) or (-) buttons.



- Press the SELECT button - the minutes will flash.



- Adjust the minutes using the (+) or (-) buttons.



### Stop Time:

- Press the SELECT button - PROGRAM & STOP (flashing) will appear on display.



- Press the SELECT button - the hours will flash.



- Adjust the hours using the (+) or (-) buttons.



- Press the SELECT button - the minutes will flash.



- Adjust the minutes using the (+) or (-) buttons.



- Press the SELECT button - the TIMER will blink



- Select TIMER ON (black icon) or OFF (white icon) using the (+) or (-) buttons.



- Press the ON/SEND button to send the information to the thermostat.



**Important: when the Timer is active, and there is power failure to the thermostat, the display will show “ON” flashing.**

## 8. Batteries Replacement

When the batteries are low, the display of the remote control will dim.  
If the batteries will not be replaced the display will turn off completely.

Batteries replacement:

- Pull the batteries cover down to reveal the batteries.
- Remove the old batteries.
- **Wait for 10 minutes before installing the new batteries.**
- Install two new AAA batteries – Pay attention to the polarity.
- Return the batteries cover to place.



**Important: The remote control will not operate unless at least 10 minutes pass between removing the old batteries and installing the new ones.**